

SUNRISE MERCHANDISER CONTROL BOARD Mk4/SR3

Dec 99

DIP SWITCH SETTINGS

N = on, F = off

DIP SW 12345678	1st credit, bonus credit	DIP SW 12345678	1st credit, bonus credit
-FFFFFFF	10c=1	-FFNFNEF	\$1=1, \$2=3, \$5=8
-NEFFFFFF	20c=1	-NFNFNEF	\$1=1, \$2=3, \$4=7
-FNFFFFFF	20c=1, 40c=3	-FNNFNEF	\$1=1, \$2=3, \$4=7, \$5=10
-NNFFFFFF	20c=1, \$1=6	-NNNFNEF	\$1=1, (\$2=2) \$3=4
-FFNFNEF	20c=1, \$1=7	-FFFNNEF	\$2=1
-NFNFNEF	40c=1	-NFFNNEF	\$2=1, \$3=2
-FNNFNEF	40c=1, 60c=2, 80c=3, \$1=4	-FNFNNEF	\$2=1, \$3=2, \$5=4
-NNNFNEF	40c=1, \$1=3 (\$2=6)	-NNFNNEF	\$2=1, \$4=3
-FFFNNEF	40c=1, \$1=3, \$2=7	-FFNNNEF	\$2=1, \$4=3, \$5=5
-NFFNNEF	50c=1 (\$1=2, \$2=4)	-NFNNNEF	\$3=1
-FNFNNEF	60c=1	-FNFNNEF	\$3=1, \$5=2
-NNFNNEF	60c=1, \$1=2 (\$2=4)	-NNNNNEF	\$3=1, \$5=2, \$10=5
-FFNNNEF	60c=1, \$1=2, \$2=5	-FFFFNFE	\$3=1, \$5=2, \$8=4, \$10=6
-NFNNNEF	60c=1, \$1=2, \$3=7, \$4=10	-NFFFNFE	\$4=1
-FNNNNEF	80c=1	-FNFFNFE	\$4=1, \$10=3
-NNNNNEF	80c=1, \$2=3	-NNFFNFE	\$4=1, \$8=3, \$12=5
-FFFFNFE	80c=1, \$2=3, \$5=8	-FFNFNFE	\$5=1
-NEFFNFE	\$1=1, (\$2=2)	-NFNFNFE	\$5=1, \$8=2
-FNFFNFE	\$1=1, \$2=3	-FNNFNFE	\$5=1, \$10=3
-NNFFNFE	\$1=1, \$2=3, \$3=5	-NNNFNFE	\$5=1, \$10=3, \$15=5

To enable NUDGE MODE, Switch 1 must be OFF.
To disable NUDGE MODE, Switch 1 must be ON.

EDGE CONNECTOR

Component Side	Solder Side
	1 /Start Switch
	2
	3 /Service credit switch
	4 Cam Switch
	5 /20c. coin input
	6 /50c. coin input
	7 /\$1 coin input
Spark Antenna	8 /\$2 coin input
	9
	10
	11 /SS Relay
	12 /Coin Meter
	13 /Start Lamp
	14 Display Data
	15 Display Clock
	16
	17
	18
12 volts DC	19 Power input, 12 volts DC
" "	" " " " " "
" "	" " " " " "
Ground	21 Ground
" "	" "
	22 " "