

SUNRISE UNIVERSAL CREDIT BOARD Mk5.

May 2000

Part no **160-162/s5** Universal Credit Board Mk5 allows the Micromech S5 or other electronic or mechanical coin mechs to be used for **all** of the following applications.

Part no **160-164/s5** Universal Video Credit Board Mk5 may be used for any of the **Video Game** applications.

APPLICATIONS

1.Video Game: Standard Mode.

Standard "conversion" Video game with one or two coin mechs operating together, with a single credit output connection to the game PCB.

2.Video Game: Seperate Mech Mode.

For 2 player video games designed to operate with separate coin entry for each player (e.g. some Neo-Geo). The Left and Right player coin mechs operate independently, with a Left and Right credit output. Effectively, this mode provides two credit boards in one.

3. Video Game: Stored Credit, 4 Players.

For 2, 3 or 4 player games designed to operate with separate coin entry for each player. The credit board allows 1 or 2 multi-coin mechs. The credit board stores incoming credit. Each player presses his button to take credit from credit pool. Allows multi player games to operate from a single coin mech. Optional four wire coin / credit display panel.

4. Video Game: 2 Channel Credit Board Mk2.

Exact emulation of the superceeded "2 Channel Credit Board Mk2". This mode is provided for compatability and only for use as a service replacement.

5. Skilltester.

Allows connection of 1 or 2 multi-coin accepters to the 20 cent Skill tester models, with optional coin / credit display panel. Can also be used with other games which require coin lockout handshaking.

6. Pinball.

The relay output allows connection of 1 or 2 multi-coin accepters to switch matrix operated games such as Williams Pinball, and others requiring an isolated or 3 wire coin input.

COMMON FEATURES

S5 CONNECTORS. The 16 pin box headers may be connected to one or two MICROMECH S5 coin mechanisms. The S5 should be set up as follows:, 50c - line1; 10c - line2; 20c - line3; free game token - line4; \$1 - line5; \$2 - line6. Alternatively, other types of coin switches may connect to the designated edge connector pins.

INDIRECT CREDIT CONVERSION. (Preferred operating mode). Bonus credits calculated on the total value of coins inserted, regardless of individual denomination. Example:- If 1 x Two Dollar coin gives 3 credits, then so will 2 x One Dollar coins.

or **DIRECT CREDIT CONVERSION.** Coin denominations may not be mixed. Indirect credit conversion is generally preferred).

ANTENNA. A simple static pickup antenna wire may be connected to the credit board. The length of the wire and its proximity to the cabinet wiring harness will determine the sensitivity of the static reset function. Operation visually indicated by a flash of the on-board LED indicator.

SPARK RESET OUT. This is an open collector, low side output which may be connected to the game board RESET input. If the game board has no reset input, a PCB technician could add the input to the gameboard, via an unused edge connector pin.

COIN METER. All coin registrations are accumulated as 10 cent units on a single coin meter. Connect coinmeter between 12 volts and Coin Meter Output . No diode is needed, the credit board contains an internal protection diode.

LAMP OUTPUT. This open collector, low side output allows installation, where appropriate, of 12 volt lamps inside the Start Buttons.

ALARM The Anti Stringing Alarm is triggered if coin switch closed longer than 250 mS. This open collector output may be connected to a general purpose Piezo Screamer, (-) lead to credit board, (+) lead to +12 volt supply. Alternatively it may be connected to a game board RESET input, so that stringing causes game to immediately reset, and stay reset for 10 seconds.

DISPLAY DATA, CLOCK. Where appropriate, the separately sold 6 digit or 2 digit LED display PCB may be connected. The 6 digit display shows \$-c inserted and the resulting credit. The 2 digit display shows credit only.

SERVICE CREDIT SWITCH input, allows a push button switch to give free credits for testing the game without incrementing coin meter. Also allows Free Game Mode.

FREE GAME MODE. This mode is entered by holding the SERVICE CREDIT switch closed for more than four seconds. If fitted, the start button lamps light and remain lit. The credit display shows 99. Pressing a start button will then start a free game, or a two player start button will start a two player game. The Free Game Mode remains in operation until the host game is switched off.

DIP SWITCH SETTINGS

N = on, F = off *applies from Batch No 0018

DIP SW 12345678	1st credit, bonus credit	DIP SW 12345678	1st credit, bonus credit
-FFFFFF-	10c=1	-NNNNFF-	\$1.10=2 *
-NEFFFF-	20c=1	-FFFFFFF-	\$1.10=1 *
-FNFFFF-	20c=1, 40c=3	-FFNFNF-	\$1.10=1, \$2=3 *
-NNEFFF-	20c=1, \$1=6	-FNNFNF-	\$1.10=1, \$2.20=3 *
-FFNFFF-	20c=1, \$1=7	-NNNFNF-	\$1.10=1, \$2=2 *
-NFNFFF-	40c=1	-NNFFFN-	\$1.10=1, \$2.20=2, \$3=3, \$4=5 *
-NNNFFF-	40c=1, \$1=3 \$2=6	-NFNFNF-	\$1.20=1 *
-FFFNFF-	40c=1, \$1=3, \$2=7	-NFFNFF-	\$1.20=1, \$2=2 *
-FFNFNF-	40c=1, \$1=3, \$2=8	-FNFNFF-	\$1.20=1, \$2.20=3 *
-NFFNFN-	40c=1, \$1=3, \$2=9	-FFFNFF-	\$2=1
-NNFNFN-	40c=1, \$1=4, \$2=9	-NFFNFF-	\$2=1, \$3=2
-FFNNFN-	40c=1, \$1=4, \$2=10	-FNFNFF-	\$2=1, \$3=2, \$5=4
-NFFNFF-	50c=1 \$1=2, \$2=4	-NNFNFF-	\$2=1, \$4=3
-FNNNFN-	50c=1, \$1=2, \$2=5	-FFNFFN-	\$2=1, \$4=3, \$5=5
-NNNNFN-	50c=1, \$1=3 \$2=6	-FFNFFN-	\$2.20=1 *
-FFFFFN-	50c=1, \$1=3, \$2=7	-NFNFFN-	\$2.20=1, \$4=3 *
-FNFNFF-	60c=1	-FNNFFN-	\$2.20=1, \$4=2 *
-NNFNFF-	60c=1, \$1=2 \$2=4	-NFNFFN-	\$3=1
-FFNFFN-	60c=1, \$1=2, \$2=5	-FNFNFF-	\$3=1, \$5=2, \$7=3
-NFFNFF-	60c=1, \$1=2, \$2=6	-NNNFFN-	\$3=1, \$5=2, \$10=5
-NFFNFF-	60c=1, \$1=2, \$3=7, \$4=10	-FFFFFN-	\$3=1, \$5=2, \$8=4, \$10=6
-FNNNFF-	80c=1	-NFFFFN-	\$4=1
-NEFFNF-	\$1=1, \$2=2	-NFNFFN-	\$4=1, \$6=2
-FNFFNF-	\$1=1, \$2=3	-FNNFFN-	\$4=1, \$6=2, \$8=3
-NNFFNF-	\$1=1, \$2=3, \$3=5	-FFNFNF-	\$4=1, \$7=2, \$9=3
-NFNFNF-	\$1=1, \$2=3, \$4=7	-FNFNFF-	\$4=1, \$10=3
-NFFNFF-	\$1=1, \$2=4	-NNFFNF-	\$4=1, \$7=2, \$10=3
-FFFNFF-	\$1=1, \$4=6	-FFNFNF-	\$5=1
-NNNFNF-	\$1=1, \$5=6	-FNNFFN-	\$5=1, \$10=3
-FNNFFF-	\$1.10=3, \$2.20=7 *	-NNNFFN-	\$5=1, \$10=3, \$15=5
-FNFNFN-	\$1.10=3 *		
-NFFNFF-	\$1.10=2, \$2.20=5 *		

OPERATING MODES

N-----F	1.Video Game: Standard	F-----F	5.Skilltester
N-----F	2.Video Game: Separate	N-----F	6.Pinball
N-----N	3.Video Game: 4 Player		
F-----N	4.Video Game: 2 Channel Mk2	NNNNNNNN	Display Test

Adjust game PCB for 1 coin / 1 credit.

CONNECTION DETAILS

(1). VIDEO GAME : STANDARD

EDGE CONNECTOR

Component Side	Solder Side
	1 Player 1 Start input
	2 Player 2 Start input
10c. input RIGHT	3 Service credit switch input
20c. coin input R	4 10c coin input LEFT
50c. coin input R	5 20c coin input L
\$1 coin input R	6 50c coin input L
\$2 coin input R	7 \$1 coin input L
Antenna	8 \$2 coin input L
Free Game Lamp	9 -
	10 -
Spark Reset out	11 Alarm output
	12 Coin Meter output
	13 Credit output to Game Board
	14 -
	15 -
	16 -
	17 -
	18 -
12 volts DC	19 Power input, 12 volts DC
" "	20 " " " " "
Ground	21 Ground
" "	22 " "

INDIRECT CREDIT CONVERSION (Preferred)

1. BONUS RESET by START BUTTON. Pins **1s & 2s** should be connected to the cabinet Start Switch buttons, which also connect to the Game Board. If the game uses only one Start Switch, Player 2 Start is not connected.

or:-

2. BONUS RESET by 30 Second TIMER. Do not connect Start Buttons to credit board. Connect Pin**1s** permanently to Ground. Bonus system will reset 30 seconds after insertion of the last coin.

DIRECT CREDIT CONVERSION (Indirect conversion normally preferred). Do not connect Start Buttons to credit board. Instead, connect pin**13s** (output) to pin**1s** (player 1 input), in addition to game board coin input.

Free game lamp driver is provided for use in Free Game Mode. (See"APPLICATIONS", above).

(2). VIDEO GAME: Separate Mech Mode

EDGE CONNECTOR

<u>COMP SIDE</u>		<u>SOLDER SIDE</u>
Twin Mode sel.(GND)	1	Left Player Start Switch
Right Service Sw	2	Right Player Start Switch
R coin 10c.	3	Left Service Switch
R coin 20c.	4	L coin 10c.
R coin 50c.	5	L coin 20c.
R coin \$1.	6	L coin 50c.
R coin \$2.	7	L coin \$1.
Antenna	8	L coin \$2.
Credit Lamp Output	9	-
-	10	-
Spark Reset out	11	Alarm output
-	12	Coin Meter output, 10c.
R Credit Output	13	L Credit Output
-	14	-
-	15	-
-	16	-
-	17	-
-	18	-
12 volts DC	19	Power input, 12 volts DC
" "	20	" " " " " "
Ground	21	Ground
" "	22	" "

INDIRECT CREDIT CONVERSION (Preferred operating mode).

1. BONUS RESET by START BUTTON. Pins **1s** & **2s** should be connected to the cabinet Start Switch buttons, which also connect to the Game Board. This connection also required if Free game Mode is used.

or:-

2. BONUS RESET by 30 Second TIMER. Do not connect Start Buttons to credit board. Connect Pin **1s** permanently to Ground. Bonus system will reset 30 seconds after insertion of the last coin.

DIRECT CREDIT CONVERSION (Indirect conversion normally preferred). Do not connect Start Buttons to credit board. Instead, connect pin **3s** (L output) to pin **1s** (L Start), and pin **13c** (R output) to pin **2s** (R Start), in addition to their connections to the game board coin inputs.

(3). VIDEO GAME: Stored Credit, 4 Players

EDGE CONNECTOR

<u>COMP SIDE</u>		<u>SOLDER SIDE</u>
P3 Credit switch	1	P1 Credit switch
P4 Credit switch	2	P2 Credit switch
R coin 10c.	3	Service Switch
R coin 20c.	4	L coin 10c.
R coin 50c.	5	L coin 20c.
R coin \$1.	6	L coin 50c.
R coin \$2.	7	L coin \$1.
Spark Antenna	8	L coin \$2.
Credit Lamp output	9	-
-	10	-
Spark Reset Out	11	Alarm output
-	12	Coin Meter output
P2 Credit Out	13	P1 Credit Out
P3 Credit Out	14	Display Panel DATA
P4 Credit Out	15	Display panel CLOCK
-	16	-
-	17	-
-	18	-
Power input, 12 volts	19	Power input, 12 volts
" " " "	20	" " " "
Ground	21	Ground
" "	22	" "

OPERATION.

After credit is gained, LAMP flashes, DISPLAY shows total value of coins in \$-c and the current credit.

Each press of a player Credit button sends one credit to that players Credit Output. Lamp stops flashing and remains lit until all credit has been taken.

(4). VIDEO GAME: 2 Channel Credit Board Mk2 Emulation

<u>COMP SIDE</u>		<u>SOLDER SIDE</u>
	1	Player 1 "Take credit" switch
	2	-
	3	Service credit switch input
	4	10c coin switch input
	5	20c coin switch input
	6	Player 2 "Take credit" switch
	7	\$1 coin switch input
Spark Antenna	8	\$2 coin switch input
	9	-
	10	-
Reset Out	11	Credit Lamp driver output
	12	Coin Meter output
Credit Out Plr.2	13	Credit output Player 1
	14	Display Panel DATA
	15	Display panel CLOCK
	16	-
	17	-
	18	-
	19	Power input, 12 volts DC
	20	" " " "
Ground	21	Ground
" "	22	" "

NOTES:-

Directly substitutes for Mult Credit Mk2 "2 Channel Credit Board" in existing installations.

For new installations, follow "(3).Stored Credit, 4 Players" installation instructions, and leave 3rd and 4th player functions un-connected.

(5). SKILLTESTER

Requires Universal Credit Board part no 160-162s5

EDGE CONNECTOR PINOUT

Component Side	Solder Side
-	1 Move Forward button (S.T. pin 4)
-	2 -
R coin 10c.	3 Service Switch
R coin 20c.	4 L coin 10c.
R coin 50c.	5 L coin 20c.
R coin \$1.	6 L coin 50c.
R coin \$2.	7 L coin \$1.
Spark Antenna	8 L coin \$2.
-	9 +12 volts DC
-	10 Lockout sense (S.T. pin 11)
-	11 Alarm output
-	12 Coin Meter output
-	13 -
-	14 Display Panel DATA
-	15 Display panel CLOCK
-	16 Credit relay COM. (S.T. pin 12)
-	17 -
-	18 Credit relay N.O. (S.T. pin 8)
12 volts DC	19 Power input, 12 volts DC
" "	20 " " " "
Ground	21 Ground
" "	22 " "

BONUS RESET by START BUTTON. Pin 1, solder side should be connected as shown to the Move Forward button input of the Skilltester Game Board, pin 4.

BONUS RESET by 30 Second TIMER. Connect credit board Pin 1 permanently to Ground, instead of to Move Forward button. Bonus system will reset 30 seconds after the insertion of the last coin.

ALARM Anti Stringing Alarm. This open collector output may be connected to a general purpose Piezo Screamer, (-) lead to pin 11, (+) lead to +12 volt supply.

(6). PINBALL.

Requires Universal Credit Board part no 160-162s5

EDGE CONNECTOR


Component Side	Solder Side
-	1 Connect to Ground
-	2 -
10c. input RIGHT	3 Service credit switch input
20c. coin input R	4 10c coin input LEFT
50c. coin input R	5 20c coin input L
\$1 coin input R	6 50c coin input L
\$2 coin input R	7 \$1 coin input L
Spark Antenna	8 \$2 coin input L
-	9 -
-	10 -
-	11 Alarm output
-	12 Coin Meter output
-	13 -
-	14 -
-	15 -
-	16 RELAY OUTPUT common
-	17 RELAY OUTPUT normal closed
-	18 RELAY OUTPUT normal open
12 volts DC	19 Power input, 12 volts DC
" "	20 " " " " "
Ground	21 Ground
" "	22 " "

Instructions are given for a Williams Pinball. Other games requiring an isolated connection to a switch matrix type coin input can use a similar connection.

Adjust the pinball pricing **1 coin 1 game**. Set the credit board for the desired coins/game and bonus.

The credit board bonus coin system will reset automatically 30 seconds after insertion of the last coin.

Power. In a Williams pinball, 12 V DC unregulated is obtained from the power supply PCB connector **3P6 pin 6** (grey/white wire). GND is connected to **3P6 pin 11** (black wire).

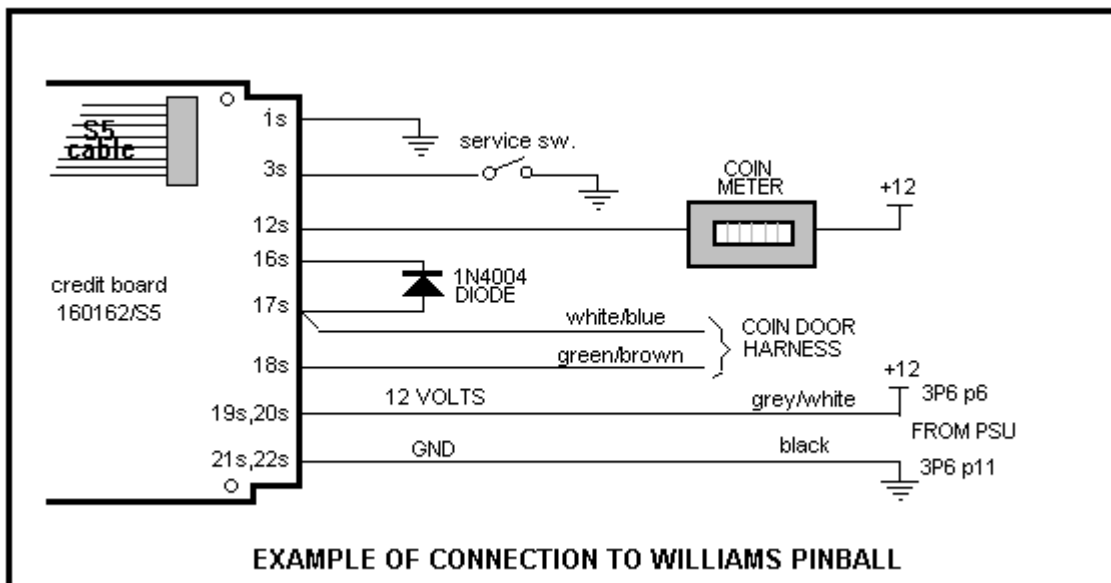

EXAMPLE OF CONNECTION TO WILLIAMS PINBALL